

■XPH802

- Built-in leads : Red, Blue, Green, Orange, Yellow, Pink, Violet, HB

Multi 8


■XPH803

SUPER Multi 8

- Built-in leads : Red, Blue, HB, Fluorescent yellow, Fluorescent pink,
- Built-in ballpoint pen : Black, Red, Blue


IMPORTANT: Incorrect use will cause lead to break.

Read instructions carefully before you attempt to use your pencil.

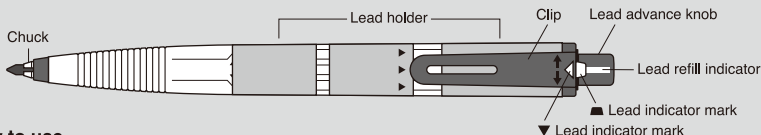


■How to use

To select lead:

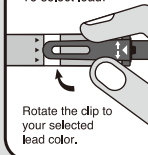

Rotate the clip to your selected lead color.


To advance lead:

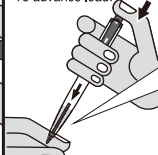

Release lead to desired lead length, but no more than 3mm (1/8 inches).

3mm

To retract lead:

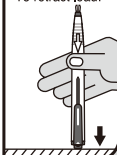


⚠ Be sure to retract the lead COMPLETELY.

In case lead is incompletely retracted, the protection mechanism will allow the clip to slip.

■How to replace the lead


Align the clip with the color you want to replace.

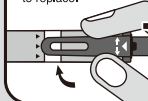

Align "①Lead refill indicator" to "②Lead indicator mark".



Push "Lead advance knob". Chuck opens widely to allow for lead to be inserted or removed.

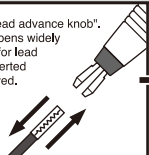

To prevent the lead from falling out, set the "Lead refill indicator" on the opposite side of the clip except when replacing the lead.

Please use Pentel's "Multi 8" refills.

■Trouble shooting

In case different color lead comes out



Keeping the lead exposing from the end of chuck.



Rotate clip.



Align "Lead indicator mark".



Be sure to retract the lead completely into the lead holder.

In case the leads are broken in the lead holder or 2 leads get into the same lead holder



Remove all leads in the same way as for replacing leads, and set them correctly.

Use of the leads that are less than 15mm in length may cause malfunctions. Replace them with new leads.

Caution ●To be used for writing and drawing only. ●Do not put small parts into your mouth to prevent suffocation or injury. ●Dropping the product may cause malfunctions. ●The tip of the product is sharp. Handle with care. ●Keep out of reach of children.